

Enjoying Movies/Music from your iPod

 
 
Compatible iPod Models

iPod model	Audio	Video	Tag information
		Composite	
iPod nano 1GB/2GB/4GB	✓	—	✓
iPod nano (2nd generation) 2GB/4GB/8GB	✓	—	✓
iPod nano (3rd generation) 4GB/8GB	✓	✓	✓
iPod nano (4th Generation) 8GB/16GB	✓	✓	✓
iPod mini 4GB	✓	—	—
iPod mini (2nd Generation) 4GB/6GB	✓	—	—
iPod with color display 20GB/60GB	✓	—	—
iPod (Click Wheel) 20GB/40GB	✓	—	—
iPod classic 80GB/120GB/160GB	✓	✓	✓
iPod photo 30GB/40GB/60GB	✓	✓*1	—
iPod (5th Generation) 30GB/60GB/80GB	✓	✓	✓
iPod touch 8GB/16GB/32GB	✓	✓	✓
iPod touch (2nd Generation) 8GB/16GB/32GB	✓	✓*2	✓

*1 Only for still picture.
*2 To view a video/picture from iPod touch on your TV, update the software to the latest version. (Any additional charges may apply.) For details about updating iPod, check on the Apple web site <<http://www.apple.com>>.

To connect an iPod

Connect an iPod to dock A or B on the unit. You can have 2 iPod devices connected at the same time.

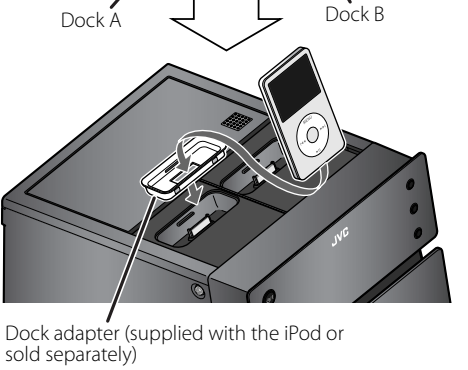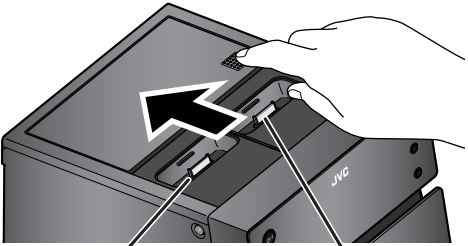

- Make sure the unit is on standby when you connect the iPod.
- When you connect iPod to the dock, make sure the terminal on the dock is fully inserted into iPod.
- After connecting iPod, wait until the unit is ready for operation (about 3 seconds).
- Be careful not to damage the terminal on the dock when connecting / disconnecting the iPod.
- Do not touch or hit the terminals of the dock and of iPod. It might cause damage to these terminals.
- Always set the volume to the minimum level when connecting or disconnecting iPod.
- Do not carry the unit with iPod connected. You might drop it down or it might cause damage to the connector part.
- Remove iPod from the dock when you do not use it.

To detach the dock adapter from the dock:

Pull up the dock adapter with your fingernail or sharp pointed tool using the slot.



 
- Be careful not to injure your fingertips or damage the terminal of the dock.

About charging the battery of iPod

- The unit enables users to charge the battery of iPod.
- ① Press to turn on the power of the unit.
 - ② Select iPod as the source.
 - ③ Press and hold for 2 seconds to start charging.
- Press and hold to deactivate the battery charging function.
 - When 2 iPod devices are connected, both batteries are charged at the same time.
 - For details of the battery charging, see the instruction manual for iPod.

Listening to a Disc/USB Device

To insert a disc

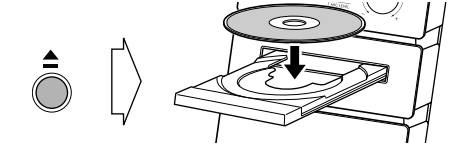


- When using an 8 cm disc, place it on the inner circle of the disc tray.
- To close the disc tray, press again.


To prohibit disc ejection (Child Lock)

When the System is turned on and the disc tray is closed, press while touching (on the main unit). To cancel the prohibition, repeat the same procedure. "UNLOCKED" appears on the display.

 To connect a USB device

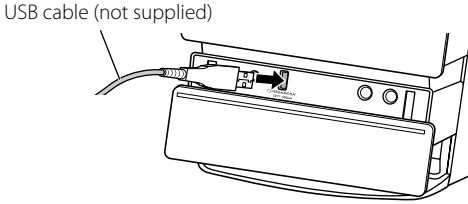

Playing Back

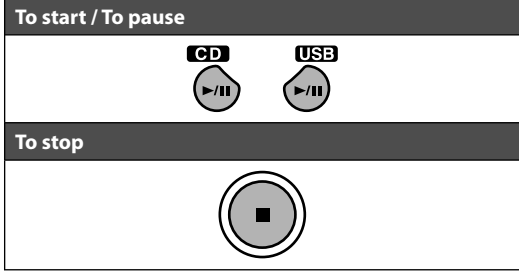 

Resume Play

The System can store the stop point, and when you start playback again by pressing CD or USB (even while on standby), it starts from the position where you have stopped—Resume Play. To stop completely while Resume is activated, press twice.

To select a group

While playing...



To select a track/file

While playing...



- When you press for the first time, you go back to the beginning of the current track/file.

To locate a particular position

While playing...



(Press and hold)

To locate an item directly

To select a group:

Press a group number using the number buttons.

To select a track/file:

Press a track/file number using the number buttons.

Program Play/Random Play

- Program Play/Random Play cannot be used for USB. Ex:
- To exit Program Play or Random Play, press PROGRAM or RANDOM until PRGM, RND are all off before or after playback.

PROGRAM—To program the playing order.

- You can arrange the playing order of the tracks/files (up to 99) before you start playback.
- Resume does not work for Program Play.
 - ① Press PROGRAM button.
 - ② Select tracks/files you want for Program Play using the number buttons.
 - For MP3/WMA files: Select a group number, then select a track/file number.
 - ③ Repeat step ② until you complete your program.
 - ④ Press to start playback.

RANDOM—To play all the tracks at random.

Playing Repeatedly

Press REPEAT repeatedly to select Repeat Mode.



- Repeat Mode varies depending on the medias or the files.

REPEAT TRK	Repeats the current track/file.
REPEAT ALL	Repeats all the contents of tracks/files.
REPEAT GRP	Repeats the current group.
REPEAT OFF	Canceled.

(PROGRAM mode)

REPEAT STEP	Repeats the current track/file.
REPEAT ALL	Repeats all the programmed tracks/files.
REPEAT OFF	Canceled.

Unique File Operations

The operations will vary depending on the discs or files.

To select the audio track



Or press number buttons to select the audio track. You can select the audio channel to listen to.

Display Message

NO DEVICE, NO USB

- No USB device is connected or the connected USB device is not compatible with this System.

DEVICE ERR

 
- The unit has failed to read the USB device.

CAN'T PLAY

- Playable format file does not exist in USB device.

Playing Back iPod Devices

- Before viewing a video/picture from iPod on your TV, make the appropriate video setting on iPod. For details of the setting, see the instruction manual for iPod.
- For iPod touch Operate iPod touch itself in the following cases:
 - when operating the home button
 - when selecting application icons on the home screen
 - when dragging the slider
- When you cannot operate iPod connected through the unit or using the remote control, operate iPod itself.

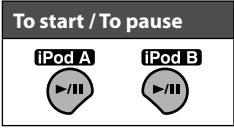

To forward or reverse skip

While playing...



To fast-forward or fast-reverse the track

While playing...



(Press and hold)

Repeat play back

Press REPEAT to change the repeat playback settings. Press once for track repeat, twice for repeat all, and once more to cancel. The System displays "REPEAT" only (the icon on the iPod display changes).

 


- Refer to the instruction manual for the iPod for details.

To go back to the previous menu



To select an item on the menu

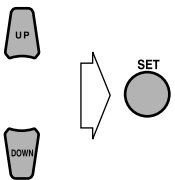

- To confirm an item on the menu, press "SET."

Shuffle Play

Applies Shuffle Play to iPod A or iPod B selected as the source. Select the desired shuffle mode.



- The shuffle icon lights up on the display of iPod devices.
- To cancel, press again until the shuffle icon disappears.

A B Shuffle

This function enables two iPod devices to play in shuffle mode alternately. You can play a variety of songs from both iPod devices. When the track of the current iPod source finishes, a track from the other iPod source will be played automatically and this cycle repeats.

 
- 1 Connect iPod to docks A and B on the unit.
 - Compatible iPod models are the same as those compatible with Tag information. Refer to "Compatible iPod Models" on page 9.
- 2 With both iPod devices connected, press the SHUFFLE button twice. The unit displays "A ← → B ON" and will start playing a track.
 - The iPod indicator (refer to "Display Indicators" in "Starting up") on the unit is displayed and the current iPod source icon blinks while playing.
- 3 To stop A B Shuffle, press the SHUFFLE button again. The unit displays "A ← → B OFF" and will stop playing the track.
 - Removing one of the iPod devices from the dock will also stop A B Shuffle.

- If this function does not work correctly, reconnect the iPod devices regardless of whether "CONNECTED" is displayed on the unit.

Listening to the Radio

Tuning in to a Station

While FM or AM is selected...



Frequency starts changing on the display. When a station (frequency) with sufficient signal strength is tuned in, the frequency stops changing.

- When you repeatedly press the button, the frequency changes step by step. To manually stop the search, press either button.
- The ST indicator lights while an FM stereo station with sufficient signal strength is tuned in.

If the FM reception is poor



The MONO (monaural) indicator lights on the display. Reception will improve though stereo effect is lost—Monaural reception. To restore the stereo effect, press the button again. The MONO (monaural) indicator disappears.

Presetting the Stations

You can preset 30 FM and 15 AM stations.

- 1 Tune in to a station you want to preset.
 - You can also store the monaural reception mode for FM preset stations if it has been selected.
- 2 Press SET to activate the preset number entry mode.
 - Finish the following process while the indication on the display is flashing.
- 3 Select a preset number for the station you store using the number buttons.
- 4 Press SET to store the station.

To tune in to a preset station

- 1 Select the band (FM or AM).
- 2 Select the preset number using the number buttons.

To back up a preset station

 
Press to go back to the standby mode. This memorizes the preset station you set.

Listening to an External Device

To connect an audio player

You can listen to the audio player connected to the AUDIO IN jack.

Stereo mini plug (not supplied)

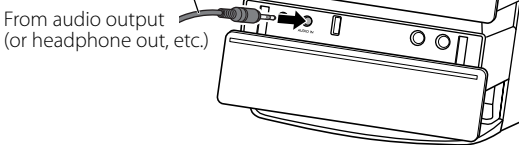

- Make sure to turn down the volume on the System to minimum level before starting playback.

To adjust the audio input level

If the sound from the device connected to the AUDIO IN jack is too loud or too quiet, you can preset the audio input level through the AUDIO IN jack (without changing the volume level).

While "AUDIO IN" is selected as the source...



 
- As the number of the level increases, the preset input level is increased.

Timer Operations

Setting the Clock


Without setting the built-in clock, you cannot use Daily Timer.

- 1 Press CLOCK/TIMER.
 - If you have already adjusted the clock before, press the button repeatedly until the clock setting mode is selected (see below).
- 2 Adjust the hour, then the minute using the cursor buttons, press SET.
 - To exit the clock settings, press CLOCK/TIMER as required.
 - To return to the previous step, press CANCEL.

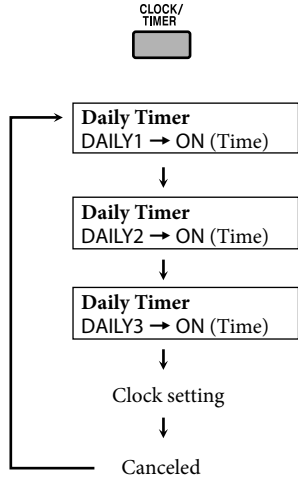

Setting the Daily Timer

 - 1 Select DAILY (1 – 3) time setting mode (ON)
- 2 Set the timer as you like.
 - Repeat the procedure for the following settings until finished.



- ① Set the hour then the minute for on-time.
 - ② Set the hour then the minute for off-time.
 - ③ Select the playback source—"TUNER AM," "DISC," "USB," "iPod A," "iPod B," "AUDIO IN" or "TUNER FM."
 - ④ For "TUNER AM" or "TUNER FM": Select a preset channel. For "DISC": Select the group number, then the track/file number". For "USB": Select the group number, then the track/file number".
 - * You can select up to 99 groups and 150 tracks/files.
 - ⑤ Select the volume level ("MIN" to "MAX" and "– –"). If you select "– –", the volume is set to the same level as when the System was last turned off.
- Once settings are completed, the timer setting information appears in sequence.

- 3 Turn off the System (on standby), if you have set the timer with the System turned on.



To cancel the Daily Timer, select DAILY (1 – 3) you want to cancel, then press CANCEL.

To turn on the Daily Timer, select DAILY (1 – 3) you want to turn on, then press ENTER/SET.

Sound Adjustments


■ Adjusting the Sound

Various Bass Effect—To create a sound suitable for the playback source.

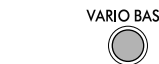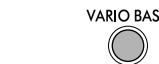
On the main unit	On the remote
	
LITeNtASY	Suitable for Karaoke and classical music. You can obtain a comfortable bass sound.
MOVIE	Suitable for a video source and playback of external component. You can obtain a strong bass sound.
TECHNO	Suitable for disco or techno music. You can obtain a strong bouncy bass sound.
TURBO	Suitable for most kinds of music and playback of external component. You can obtain a balanced bass sound.
AUTO	The System automatically applies TURBO, LITeNtASY, MOVIE or TECHNO according to the playback source (initial setting).
OFF	No sound effect.

Superbass level adjustment—From level 1 to level 5.

On the main unit



On the remote


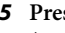


■ Selecting the Sound Modes

Sound Mode (for CD, USB and iPod)—To select one of the preset Sound Modes.

ROCK	Boosts low and high frequency. Good for acoustic music (initial setting).
POP	Good for music with an emphasis on vocal.
CLASSIC	Good for classical music.
DANCE	Increases resonance and bass.
HALL	Adds depth and brilliance to the sound.
STADIUM	Adds clarity and spreads the sound, as in an outdoor stadium.
USER1/2/3	Your individual mode stored in memory. See below.
FLAT	Canceled.

To create your own sound modes (User Mode)

- 1 Select one of the preset Sound Modes.
- 2 Press SET.
- 3 Press  to select BASS (bass) or TRE (treble) to adjust.
- 4 Press UP or DOWN to adjust the parameters then press ENTER/SET.
- 5 Press  to select one of the user modes (USER1–3) to store your setting into.
- 6 Press SET to finish.

Enjoying Karaoke


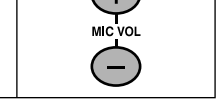
DO NOT keep the microphones connected while they are not in use.

IMPORTANT


- Always set MIC LEVEL to “MIN” (0) before disconnecting the microphone.
- MIC LEVEL adjustment is valid for both microphones connected to the MIC 1 and MIC 2 jacks.
- If the microphone does not work properly, please disconnect it and connect again.

■ Singing Along (Karaoke)

- 1 Connect the microphone(s) (not supplied) to the MIC 1 and/or MIC 2 jack.
- 2 Start playing a source.
- 3 Sing into the microphone.
- 4 Adjust the microphone level and volume.

On the main unit	On the remote
	

 ■ Changing the Karaoke Setting

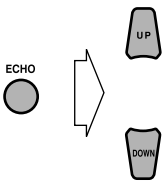

- ECHO**—To apply an echo to your voice.
- You can adjust the echo level from ECHO OFF (no effect) to ECHO 6 (strongest).
- MIC VOL**—To change the mic volume.
- The mic volume level can be adjusted in 16 steps from MIN (0) to MAX (15).

TO OUR VALUED CUSTOMER

THANK YOU FOR PURCHASING THIS JVC PRODUCT.

WE WANT TO HELP YOU ACHIEVE A PERFECT EXPERIENCE.

NEED HELP ON HOW TO HOOK UP?
NEED ASSISTANCE ON HOW TO OPERATE?
NEED TO LOCATE A JVC SERVICE CENTER?
LIKE TO PURCHASE ACCESSORIES?

JVC® IS HERE TO HELP!
TOLL FREE: 1(800)252-5722
<http://www.jvc.com>

Remember to retain your Bill of Sale for Warranty Service.

Do not attempt to service the product yourself

Caution

To prevent electrical shock, do not open the cabinet.
There are no user serviceable parts inside.
Please refer to qualified service personnel for repairs.

Learning More about This System

■ Connections

- Make sure the antenna conductors do not touch any other terminals, connecting cords or the power cord. Also, keep the antennas away from metallic parts of the System, connecting cords, and the power cord. These could cause poor reception.
- Use only speakers with the same speaker impedance as indicated by the speaker terminals on the rear of the System.
- The speakers are magnetically shielded to avoid color distortions on TVs. However, if not installed properly, it may cause color distortions. So, pay attention to the following when installing the speakers.
 - When placing the speakers near a TV set, turn off the TV’s main power switch or unplug it before installing the speakers.
 - When placing the speakers near a TV set, turn off the TV’s main power switch or unplug it before installing the speakers.
 - Then wait at least 30 minutes before turning on the TV’s main power switch again.
 - Some TVs may still be affected even though you have followed the above instructions. If this happens, move the speakers away from the TV.
- You cannot connect a computer and JVC Everio camcorder to the USB terminals of the System.
- Electrostatic shock at connecting a USB device may cause abnormal playback of the device. In this case, disconnect the USB device then turn off this unit.

■ Basic Operations

Setting the ECO (Ecology) Mode:

- If you turn on the Daily Timer while the ECO mode is activated, the ECO mode is canceled.


■ Enjoying Movies/Music from your iPod

JVC is not responsible for any loss of or damage to iPod that might result from the use of this product.

- Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.
- Sound distortion may occur when playing back audio sources with a high recording level. When distortion occurs, it is recommended to turn off the equalizer of iPod. For information on operating iPod, see the instruction manual for iPod.
- If iPod does not play correctly, update iPod software to the latest version.
- For details about updating iPod, check on the Apple web site <<http://www.apple.com>>.
- JVC does not assure the compatibility of iPod released after April 2009 with this unit.

■ Listening to a Disc/USB Device

JVC bears no responsibility for any loss of data in the USB mass storage class device while using this System.

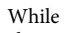- When connecting with a USB cable, use the USB 2.0 cable whose length is less than 1 m.
- You can connect a USB device such as a USB flash memory device, hard disk drive, multimedia card reader, etc. to this System.
- When you change the source to “CD” or “USB,” it may take a while to activate the source.
- While the System is reading a disc, the source may not change to “USB” properly. Press  to stop the disc before changing the source to “USB.”
- On some discs, the actual operations may be different from what is explained in this manual due to the programming and disc structure; such differences are not a malfunction of this System.
- The total number of tracks (files) that the System can detect is 4 000.
- The System recognizes up to...
 - 999 tracks (files) per group.
 - 99 groups per disc.
- Unplayable files are also counted in the total file number. Playable files which do not belong to any groups are recognized as files of group 1.

Program Play/Random Play:

- Program is cleared in the following cases:
 - When the System is turned off (standby).
- During programming steps...
 - Your entry will be ignored if you have tried to program an item number that does not exist (for example, selecting track 14 on a disc that only has 12 tracks).
 - For MP3/WMA files, you can program up to 99 files.
 - You cannot select the 151st or later tracks.

■ Listening to the Radio

- If you store a new station into an occupied preset number, the previously stored station in that number will be erased.
- When you unplug the power cord accidentally or if a power failure occurs, the preset stations may be erased. If this happens, preset the stations again.

■ Timer Operations

General:

- When the System is on standby, you cannot set the clock and Daily Timer.

Setting the Clock:

- “0:00” will flash on the display until you set the clock.
- The clock may gain or lose 1 to 2 minutes per month. If this happens, reset the clock.

Setting the Daily Timer:

- If you do not specify the preset station or track number correctly while setting a timer, the currently selected station or the first track will be played when the timer is activated.
- When you unplug the power cord or if a power failure occurs, the timer will be canceled. You need to set the clock first, then the timer again.
- If you set the Sleep Timer after Daily Timer starts playing the selected source, Daily Timer is canceled.

■ Sound Adjustments

Adjusting the Sound:

- This function also affects the sound through the headphones.

BT-51018-6
(1008)

15

* **JVC®** **LIMITED WARRANTY** 1-1 **USA ONLY** *
* **ONLY FOR PRODUCT PURCHASED IN U.S.A.** *
* JVC America Corp. (JVC) warrants this product and all parts thereof, except as set forth below ONLY TO THE ORIGINAL RETAIL PURCHASER to be FREE FROM DEFECTIVE MATERIALS AND WORKMANSHIP from the date of original purchase for the period shown below. (“The Warranty Period”) *
*

REFURBISHED PRODUCTS CARRY A SEPARATE WARRANTY. THIS WARRANTY DOES NOT APPLY. FOR DETAIL OF REFURBISHED PRODUCT WARRANTY, PLEASE REFER TO THE REFURBISHED PRODUCT WARRANTY INFORMATION PACKAGED WITH EACH REFURBISHED PRODUCT.

For customer use:

Enter below the Model No. and Serial No. which is located either on the rear, bottom or side of the cabinet. Retain this information for future reference.

Model No. :	Serial No. :
Purchase date :	Name of dealer :

13

14

16